


25-3415B - RIGHT HAND
Fairbanks Softball & Baseball Dugouts
Product ID - CVT
Roof - RP-02
Weight - 9,220 LBS Each
1 Required

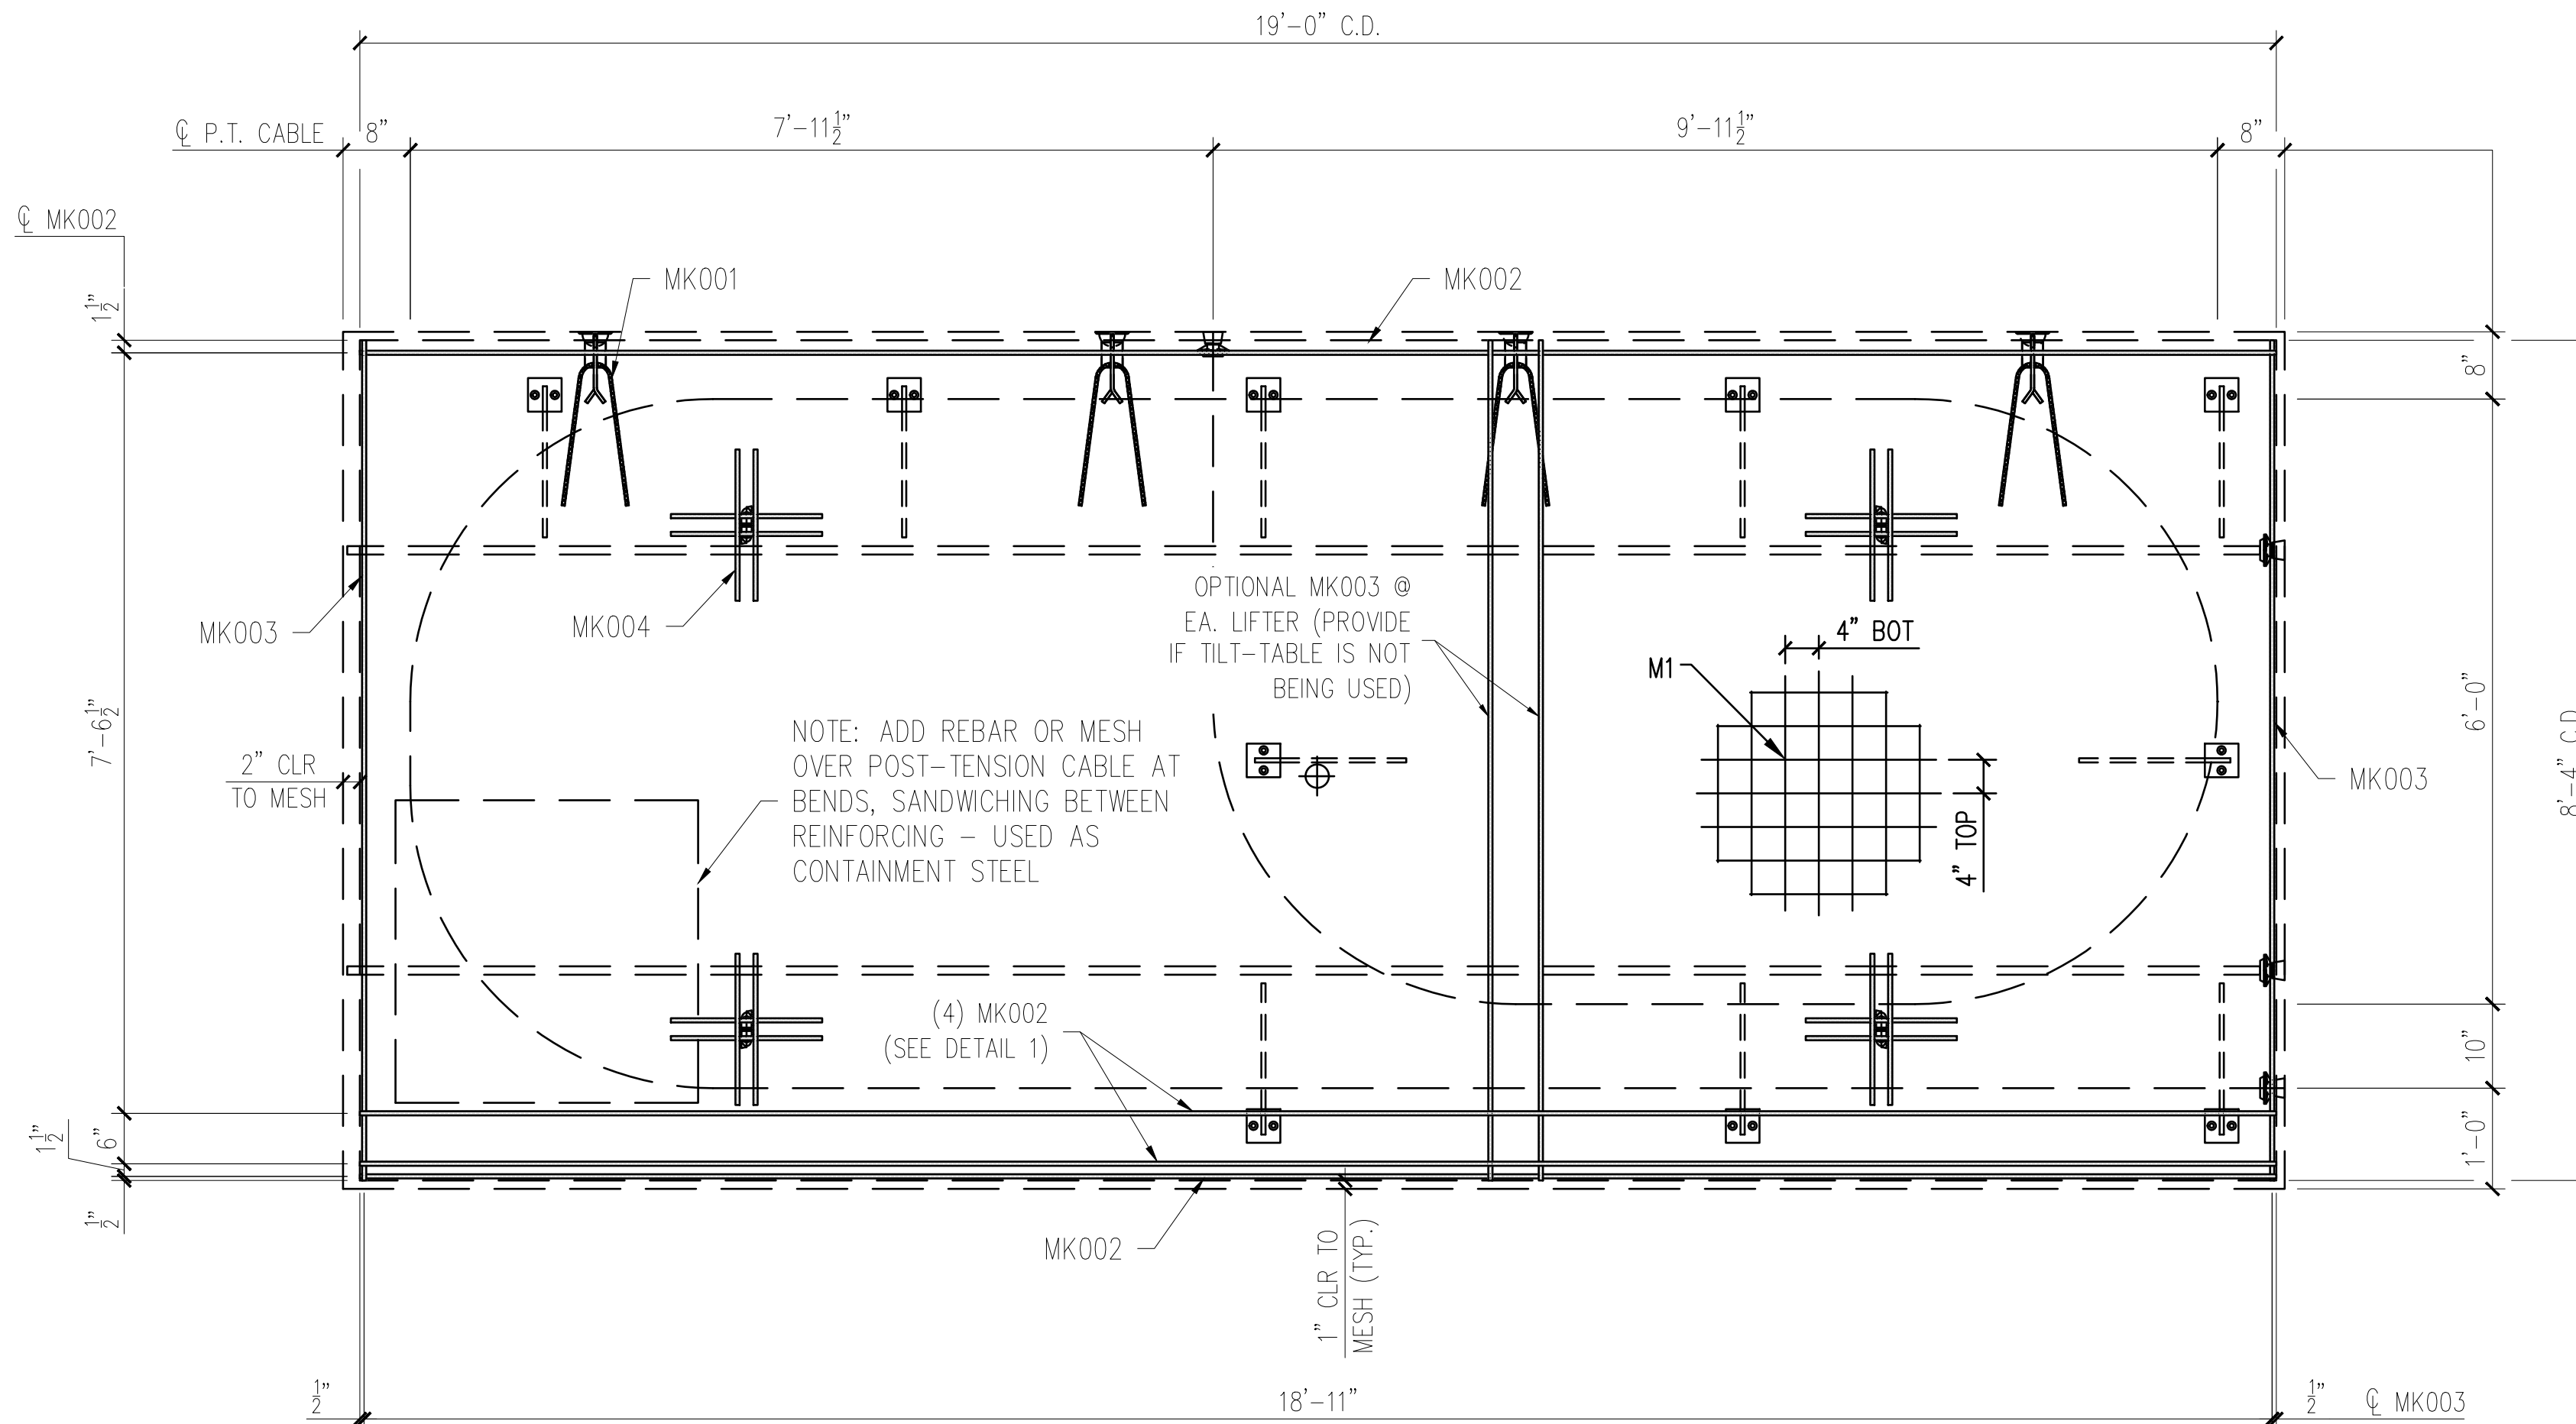


WALL FORM VIEW
 SCALE: 1/2" = 1'-0"

REINFORCING SCHEDULE		
MARK #	DESCRIPTION	QTY
MK001	#3 X 3'-0"	4
MK002	#3 X 19'-0"	6
MK003	#3 X 8'-4"	2
MK004	#4 X 1'-6"	16
S1	1/2" X 62'-4" LONG P.T. CABLE	1
MESH SCHEDULE		
MARK #	DESCRIPTION	QTY
M1	W4XW4 4"X4" WWF 19'-0" x 8'-4"	1

REV	DESCRIPTION	DATE
INI.		
1		
2		
3		
4		
5		

- NOTES:**
1. TRIM PLASTIC SHEATH AT BOTH ENDS OF THE PT CABLE TO FIT BETWEEN U-5 ANCHOR PLATES
 2. CONSTRUCT REBAR-MESH CAGE ACCORDING TO THE DRAWINGS. SECURE LIFTING APPARATUS TO FORM AND ADD PROPER REINFORCEMENT. PLACE REBAR-MESH CAGE AND HAIRPINS AT INSERTS WITH PROPER CLEARANCES (PER DRAWINGS).
 3. PLACE AND SECURE PT CABLE AS INDICATED ON THE DRAWINGS (REINFORCING VIEW)

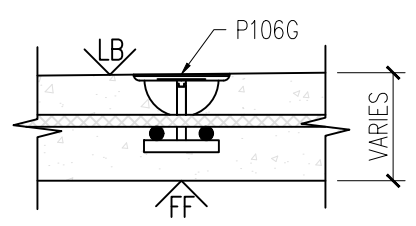

MESSAGE CENTER

1. REFER TO DETAILS FOR REINFORCEMENT/CABLE PLACEMENT
2. SUPPLEMENTAL STEEL FOR STRIPPING AND HANDLING MAY BE ADDED AS REQUIRED.

CHECKED BY: _____ DATE: _____
 APPROVED BY: _____ DATE: _____

PRODUCT	SALES ORDER NUMBER
ESW BUILDING	-
SHEET NUMBER	NUMBER REQUIRED
2 OF 2	1

EASI-SET® WORLDWIDE

PROJECT: 38'x8' EASI-SET DUGOUT
 FAIRBANKS DUGOUTS
 MILFORD CENTER, OH
 CONTRACTOR: LEVAN'S EXCAVATING, INC.

SCALE: NTS

DRAWN BY: FTL

CHECK BY: WCR

ISSUE DATE: 01.06.26

PIECE MARK: RP-02


7 8 9 10

5119 Calllett Rd. • Midland, VA 22728 • info@EasiSet.com
 WWW.EasiSet.com • 800-547-4045 • Fax 540-439-2541


**25-3415B - RIGHT HAND
Fairbanks Softball & Baseball Dugouts
Product ID - CVT
Roof - RP-02
Weight - 9,220 LBS Each
1 Required**

RECOMMENDED STRESSING PROCEDURES For Roofs and Floors – Model 080838C

1. Remove form rails. Verify concrete strength with Schmidt Hammer or cylinder breaks. Concrete shall be a minimum of 3,500 PSI before cable can be stressed.
2. Remove recessed plastic pocket-formers at the post-tensioning anchor.
3. Remove the plastic sheath from the strand all the way from the base of the anchor to the end of the strand. Clean off grease from exposed portion of cable. Use a suitable solvent. Never heat or use flame on the cable.
4. Insure that the tapered holes in the anchors are cleaned and free of any debris or cement paste, which might interfere with proper wedge seating.
5. Install wedge sets around the strand at each anchor. Press the wedges in with the fingers evenly. Then, using a hand wedge setter, engage the wedges securely so that the stress will be evenly distributed over the wires of the strand.
6. Slide the stressing jack over the cable and place against the wedges installed in the cast-in anchors (see details A & B).
7. Using manufacturer recommendations, properly secure the stressing jack to the strand.
9. Standing back from the system, engage the jack to stress the strands until the pump pressure gauge corresponds to 33 K required tension on the 1/2" cable and note the elongation achieved. Whenever stressing, be sure to observe safety precautions and operator positioning in anticipation of unexpected failures.
NOTE: Force in the tendons shall always be measured by gauge readings and verified by elongation. Compare the elongation noted during stressing to the theoretical (calculated) elongation to ensure proper pull (tension) is reached. Refer to industry manuals (PCI) for the proper methods of calculating elongation.
10. Release pump pressure slowly and remove the jacking system and temporary stressing anchor. Your post release tension on the cable will be 28.5 K.
11. Cut off strand tails at 1" from the wedge and pack the holes with permanent grout. Repeat procedure for other end of cable.

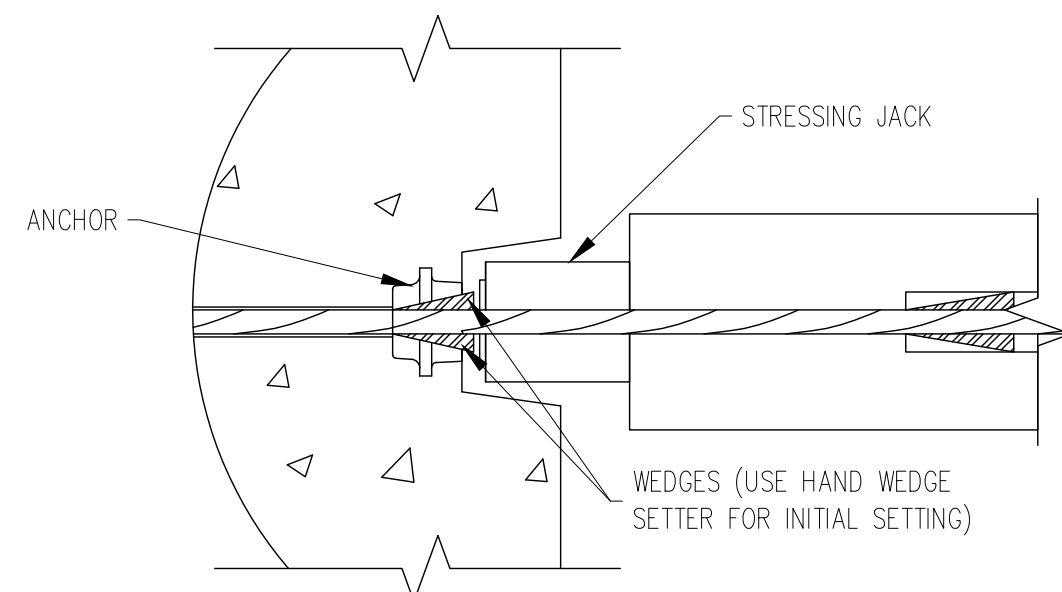

A

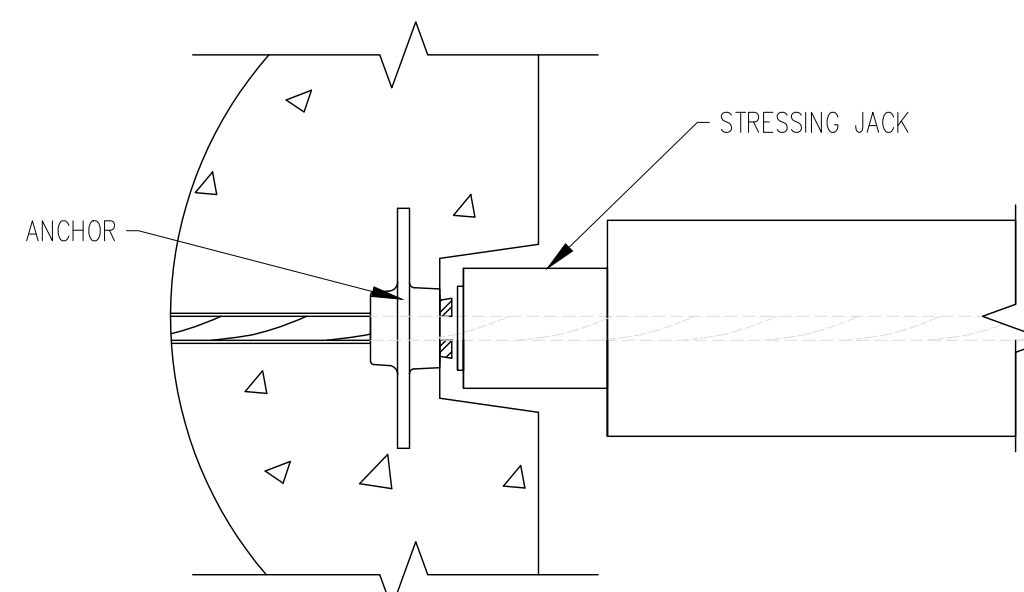

B

SAFETY INSTRUCTIONS:

NOTE: Stressing units are calibrated against load cells to determine the gauge pressures for a particular unit which will produce the desired engineering force. Gauge pressure versus actual load calibration should be checked every six months against a load cell. Never use equipment which has not been tested in the last 6 months. The Quality Control Department has the responsibility to insure the stressing unit is calibrated semi-annually. Refer to manufacturer for calibration charts specifically relating to the particular unit (stressing jack).

ROOF AND FLOOR POST-TENSIONING Stressing System Safety Instructions:

This equipment is designed and built to provide safety during equipment operation. It must be operated and maintained by personnel who are trained in and follow safe procedures. Since the forces involved in tendon stressing are in the order of 33 to 46 kips, it is obvious that failure from any cause could be damaging to personnel and property. Accordingly, stressing equipment operators are expected to observe all applicable safety precautions including the following but not limited to:

1. Before activating the pump, visually check all elastomeric tubing for nicks, cracks, or other damage and repair or replace if required.
2. See that all tubing joints are tightly connected.
3. Be sure that pump is supported in a stable manner and positioned to avoid strain on connection lines.
4. Be sure that protective dunnage and appropriate safety barriers are erected to protect the operator and any others in the area.
5. Observe the gauge pressure that will develop the required tensile force as marked on the tag attached to the pump. Locate this reading on gauge face.
6. Be certain that tensioning twin-rams are positively engaged and correctly aligned.
7. Activate pump and observe gauge. If pressure does not build up promptly, check system for leakage and make sure that anchors and wedges on both ends of the POLYSTRAND® tendons are properly engaged. After an initial tension on the strand (5K), stop and check for alignment. Make sure that the strand is at the top of the slot provided in the tension jack cylinder connector plates.
8. Continue pumping until final pressure/force is attained. When stressing long tendons, multiple strokes and resetting the temporary anchor will be required. – CAUTION – pressure will build extremely fast if rams are fully extended. Monitor ram extension and gauge readings continuously.
9. When the correct force has been applied to the tendon, stop the pump motor and release the pressure on the pack by opening the hydraulic valve.
10. Use care in moving and storing equipment to insure that gauge and tubing are not damaged.
11. Observe site rules pertaining to frequency of gauge calibration.

DATE	DESCRIPTION	INI.	REV.
-		-	1
-		-	2
-		-	3
-		-	4
-		-	5

PROJECT: 38'-0" X 8'-0" X 8'-0" EASI-SET
FAIRBANKS DUGOUTS
CONTRACTOR: INFRASTRUCTURE PRECAST

STRESSING PROCEDURES

SCALE
--

DRAWN BY
JAD

CHECK BY
WCR

ISSUE DATE
12.31.25

SHEET
P-02

EASI-SET® WORLDWIDE
5119 Callett Rd. • Midland, VA 22728 • info@EasiSet.com
www.EasiSet.com • 800-547-4045 • Fax 540-439-2541

Transverse PT Check for Modular Building - Roof

Material Data

- (7) Wire lo-lax Strand - ASTM A416
- Φps 0.500 in,
- A= 0.153 in²
- E= 28500000 psi
- fpu= 270 ksi
- Strand Length 462 in

Assume (Info supplied by strand manufacturer)

- k= 0.0014 Wobble Friction Coeff.
- μ= 0.05 Curvature friction coeff. (Initial tension of 3,000 lbs)

Strand is to be stressed 70% of ultimate
 = 28917 lbs

Adjustments to tensioning

- 1) Dead end anchor wedge seating loss
 ~ Expected to be 1/16 in
- 2) Live end anchor wedge seating loss
 ~ Expected to be 3/16 in, recommend over pull 3/16"
- 3) Elastic Shortening
 Neglect for this pnl
- 4) Friction Loss

Additional force to overcome frictional forces between strand and sheathing

Tensioning Computations

$$\text{Basic Elongation} = \frac{(\text{Force required beyond initial tension}) (\text{Length of strand between anchorages})}{(\text{Area of strand}) (\text{Modulus of Elasticity})}$$

= 2.75 in

Adjustments

- a) Dead end anchor wedge seating: Add 1/16" to elong. No force adjustment req'd
 Add 1/16 in
- b) Live end seating: over pull by 3/16"
 Add 3/16 in

Force adjustment t = 1770 lbs lbs α = curvature = π(2.5) 0.00 radians

c) Friction losses $\frac{PD}{PS} = e^{-(kL + \mu\alpha)}$

= 0.948

Avg. strand force = 0.974 2.62% Loss

Total force and elongation at live end must be increased to compensate for friction losses


Elong. Adjustment = 0.072 in

Force Adjustment = 759 lbs

Total Force Required = 31445 lbs OK

Elongation Summary:

Gross Theoretical Elongation			
Basic Elongation		2.75 in	
Dead End Seating Loss		0.063 in	
Live End Seating Loss		0.188 in	
Friction Losses		0.072 in	
Total Elongation		3.07 in	
Rounded		3 1/16 in	
Tolerance limits	-7.0%	2.85 in	2 14/16 in
	+7.0%	3.28 in	3 5/16 in

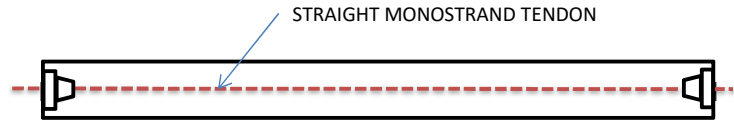

Cable Configuration

25-3415B Fairbanks Softball & Baseball Dugouts Stressing Procedures

PT Check for Roof Panels RP-01 & RP-02 (PCI MN)


Material Data

- (7) Wire lo-lax Strand - ASTM A416
- Φps = 0.500 in,
- A = 0.153 in²
- E = 28500000 psi
- fpu = 270 ksi
- Strand Length = 706 in

Assume (Info supplied by strand manufacturer)

- k = 0.0007 Wobble Friction Coeff.
- μ = 0.05 Curvature friction coeff. (Initial tension of 3,000 lbs)

Strand is to be stressed 70% of ultimate
 = 28917 lbs

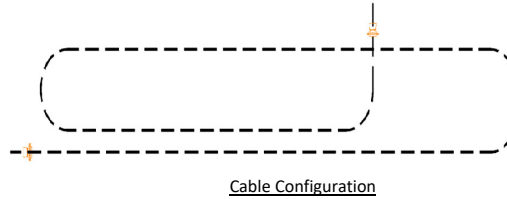

Adjustments to tensioning

- 1) Dead end anchor wedge seating loss
 ~ Expected to be 1/8 in
- 2) Live end anchor wedge seating loss
 ~ Expected to be 1/8 in, recommend over pull 1/8"
- 3) Elastic Shortening
 Neglect for this pnl
- 4) Friction Loss
 Additional force to overcome frictional forces between strand and sheathing

25-3415B Fairbanks Softball & Baseball Dugouts Stressing Procedures

Tensioning Computations

Basic Elongation = $\frac{\text{(Force required beyond initial tension) (Length of strand between anchorages)}}{\text{(Area of strand) (Modulus of Elasticity)}}$
 = 4.20 in

Adjustments

- a) Dead end anchor wedge seating: Add 1/8" to elong. No force adjustment req'd
 Add 1/8 in
 - b) Live end seating: over pull by 1/8"
 1/8 in
- Force adjustment t = 772 lbs lbs α = curvature = π(2.5) 7.85 radians
- c) Friction losses $\frac{PD}{PS} = e^{-(kL + \mu\alpha)}$
 = 0.648
 Avg. strand force = 0.824 17.60% Loss

Recommend sequential jacking at both ends of the tendon be used to reduce the overstressing the strand at the live end

Friction loss at mid-point of tendon

$\frac{PD}{PS} = e^{\frac{-(kL + \mu\alpha)}{2}}$
 = 0.805
 Avg. strand force over half of tendon = 0.902 9.75% Loss

Total force and elongation at live end must be increased to compensate for friction losses

- Elong. Adjustment = 0.409 in
- Force Adjustment = 2820 lbs
- Total Force Required = 32509 lbs DK

Elongation Summary:

Gross Theoretical Elongation	
Basic Elongation	4.20 in
Dead End Seating Loss	0.125 in
Live End Seating Loss	0.125 in
Friction Losses	0.409 in
Total Elongation	4.86 in
Rounded	4 14/16 in
Tolerance limits	-7.0% 4.52 in 4 8/16 in
	+7.0% 5.20 in 5 3/16 in